

Lay out the parts as shown. Part 5 goes underneath the assembly. The rest of the parts go on top in the order shown.



Part 8 goes on the assembly and then part 10 goes on top of that.

For the ankle area the order is Part 9, 11, 11A & 11B.

Note that once these parts are assembled the ankle bracelet can not be removed. If you have an aluminum one install it before this step.


Parts 7A are not needed but can be used to fill the gap in the sides of the ankle before the styrene sheets are installed. This will go under the ankle area from the assembly in page 8

See Page 9
about Parts 11A
and 11B

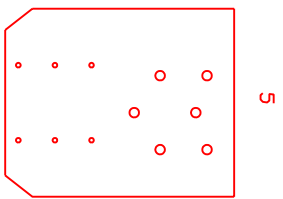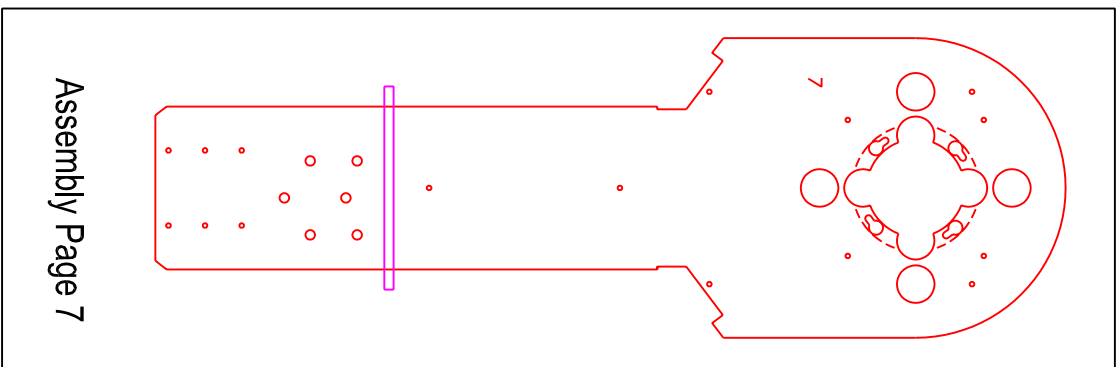


5


Assembly Page 7

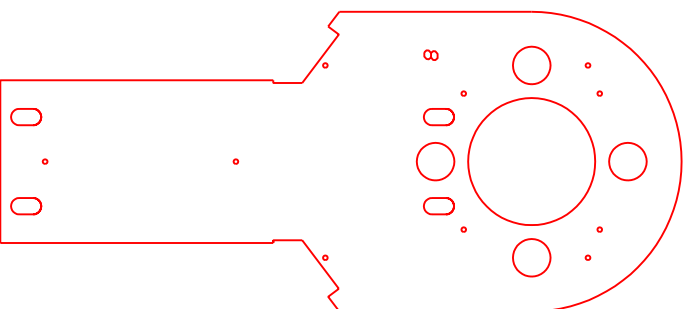


8

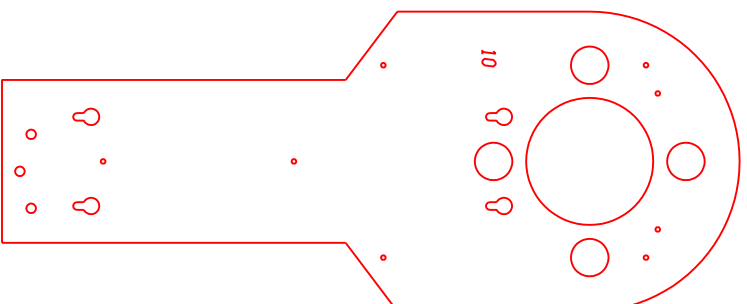


10

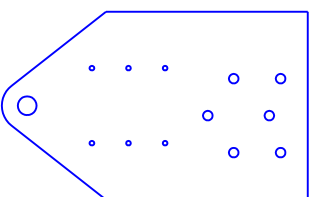


9

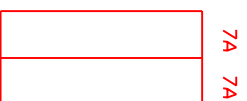


7A 7A

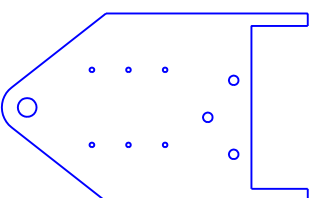

11.

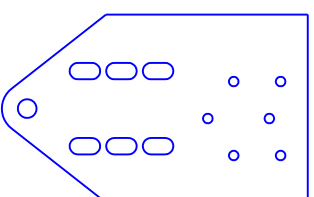

11A

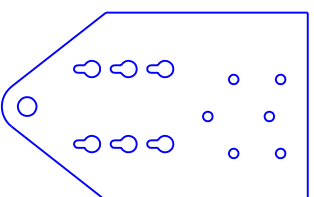

11B